SPOT CHIEF[®]

OWNER'S MANUAL



Product Codes:

SSC025212V

Version 1.4

Copyright $\ensuremath{\mathbb{C}}$ Enduraplas. All Rights Reserved.



CONTENTS

INTRODUCTION	3
WARNINGS A	4 & 5
GETTING STARTED	6 - 8
MAINTAINING	9 & 10
CLEANING	11 & 12
WINTERIZING	13
TROUBLESHOOTING	14 & 15
WARRANTY	16 - 20
PARTS BREAKDOWNS - SPOT CHIEF®	21 & 22

INTRODUCTION

Congratulations! You now own an Enduraplas sprayer. Durable design and construction assure you a lifetime of extreme performance. No sprayer is tougher. No sprayer will last longer.

Take a look through this owner's manual to learn how the pros use their Enduraplas sprayer.

Order Genuine Enduraplas Parts & Accessories:

parts.enduraplas.com



Watch Instruction Videos:

www.youtube.com/enduraplas

Discover More Helpful Tips:

blog.enduraplas.com/spraying

WARNINGS

- When connecting this sprayer to your Spot Chief (or vehicle), ensure that you have read the Spot Chief's Owner's Manual and that you comply with all the weight restrictions as specified by the Spot Chief's manufacturer, as overloading can cause injury or death. Remember that 1 gallon of water weighs 8.33 pounds.
- 2. To ensure your own safety and that of others, you must comply with all relevant environmental, work place health, safety legislation and codes of practice.
- 3. Select and wear appropriate Personal Protection Equipment in accordance with the label of the product you intend to use.
- 4. Care should be taken when spraying in windy conditions as spray drift may contaminate the air and may affect the operator or damage adjacent non-target vegetation. It is recommended that a speed of 6mph is not exceeded.
- Once the spraying operation has been completed, decontaminate the spray tank and spray accessories.
 Dispose of tank rinsing's in compliance with current environmental, work place health and safety regulations.
- 6. Personal Protection Equipment must still be worn while decontaminating your sprayer as per warning 3 above.
- 7. Improper or careless use of this sprayer can cause serious injury. Minors should never be allowed to use this sprayer. This sprayer should not be used when bystanders or animals are in the area. This sprayer should never be used while children are in the area.
- 8. Never leave the sprayer unattended without turning off the pump, relieving the line pressure, and flushing the sprayer of any harmful chemicals.
- 9. You must be in good mental health to operate this sprayer and not be under the influence of alcohol or any drugs

WARNINGS

- that could impair your vision, physical strength, dexterity, judgment, or other mental capacity.
- 10. No modifications and/or alterations may be made to this sprayer. Any such modifications not only void the sprayer warranty but can make the unit dangerous to anyone operating the pump.
- 11. Always inspect hoses and piping to avoid burst injuries.



Watch Instruction Videos:

www.youtube.com/enduraplas

Discover More Helpful Tips:

blog.enduraplas.com/spraying

6


GETTING STARTED

Setting up the Spot Chief®


1) Unit comes with two power source wire harnesses. If you choose to use cigarette wire harness, connect the 2 prong plug on wire harness to the 2 prong plug on the pump and plug the other end into the cigarette plug.




2) If you choose to use battery clip wire harness, connect the 2 prong plug on wire harness to the 2 prong plug on pump and attach clips to battery. Red clip on positive post and black clip on negative post.

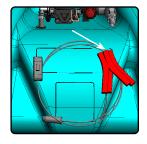

3) Mount the hose holders on either the front or the back of your sprayer using the provided holes in the tank with phillips head screws.

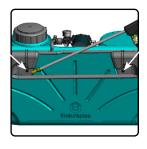


4) There is an extra port provided on unit that can be utilized.

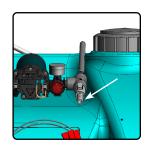


GETTING STARTED

Setting up the Spot Chief®


5) Fill the tank 1/4" full with water.

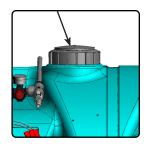

6) Before running your pump make sure the regulator is fully open to avoid premature wear or damage to the pump. Turn counterclockwise to open.

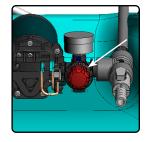

7) Power on pump using the switch on the wire harness.

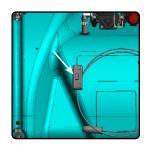


8) Squeeze the hand gun trigger to start liquid flow.




GETTING STARTED

Setting up the Spot Chief®

9) While holding hand gun trigger, adjust the regulator by turning knob clockwise to reach desired pressure.

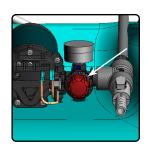

10) If the pump is pulsating irregularly, you can adjust the pump pressure setting by turning the set screw in the end of pump. Turn clockwise to increase pump pressure and counterclockwise to decrease pump pressure.

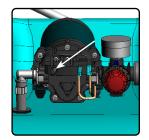

Pro Tip:

To maximize pump life, maintain pressure settings that do not cause the pump to pulsate whenever possible.

MAINTAINING

Keeping your sprayer in good condition will help you lengthen the life of the sprayer. Everyone knows a well maintained piece of equipment ensures a longer life span. Sprayer maintenance can seem a huge task if you don't have the right tools.

Cleaning Your Tank, Hoses & Fittings

Turn the page to see how the pros clean the tank on their sprayer equipment.



Watch Instruction Videos:

www.youtube.com/enduraplas


Discover More Helpful Tips:

blog.enduraplas.com/spraying


The information applies in normal operating conditions. The specific intervals must be shortened accordingly for longer daily working hours. If the machine is only used occasionally, the intervals can be extended accordingly.	normal operating conditions. The specific intervals must be shortened y working hours. If the machine is only used occasionally, the intervals gly.	Before starting work	At the end of work and/or daily	Weekly or every 40 operating hours	After the first 5 operating hours	Every 250 operating hours o once a year	If damaged	If required
مناطب من عفدا منسي	Visual inspection (condition, leaks)	×						
Complete machine	Clean		×					
	Clean		×					
Iank, noses and nungs	Drain		×					
Filter basket (inside lid)	Clean		×					×
In-line filter	Clean		×					×
	Clean							×
Spray lance nozzie	Replace						×	
All accessible screws and nuts	Re-tighten							×
Safety labels	Replace						×	
Pump	Maintain	Read a	wollof br	all mainte pur	intenance and pump manual.	Read and follow all maintenance and care instructions in the pump manual.	tructions	in the

CLEANING


1) Drain tank by taking out the drain plug on bottom of tank. When flushing the sprayer, pay attention to where the chemical will run. Always clean in an area that will not contaminate water supplies, streams or crops.

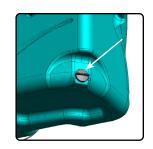


2) After draining the tank, rinse the inside of the tank out by spraying clean water with water hose.

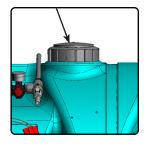

3) Reinstall drain plug in tank.

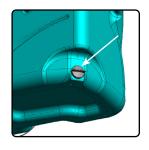

4) Fill tank 1/4 full with clean water.

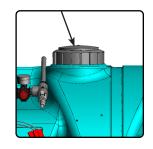



For Your Safety, Watch Video:


blog.enduraplas.com/spraying

5) Turn the pump on and spray water through hand wand ensuring all chemical is rinsed out of system. After rinsing system, if there is any remaining liquid in tank, remove drain plug.




WINTERIZING


1) After you have flushed out your sprayer and it's the end of season, blow out pump and plumbing lines using compressed air to remove all liquid from system.

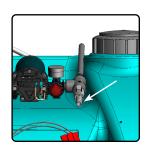

2) Pour small amount of anti-freeze into tank, then turn pump on and hold trigger on gun. Spray until anti-freeze comes out of spray wand tip. Then, power pump off.

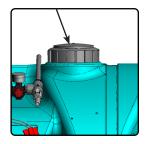

3) To ensure longivity of your sprayer, store inside a safe area. Make sure all plugs and valves are closed.

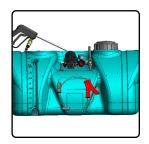

TROUBLESHOOTING

CONDITION	CAUSE	REMEDY
Pump will not prime	1) Air leak on suction plumbing 2) Blocked/Restricted intake hose	1) Tighten/replace fittings & hose clamps. Verify suction hoses are in good condition 2) Remove blockage from suction line, ensure line is not kinked or plugged
Pressure drops/ fluctuates during standard operation	 Restriction on suction line Pump sucking air Damaged regulator 	1) Inspect tank and suction lines and remove restriction 2) Tighten fittings 3) Remove regulator stem and inspect for broken parts/pieces
Pressure gauge not registering	1) Plugged with debris	1) Unthread, check and clean pressure gauge

CONDITION	CAUSE	REMEDY
Hand gun loses pressure	1) Debris in hose or nozzle 2) Pump losing prime 3) Pump pressure dropping/fluctuating	1) Unthread nozzle tip and clean 2) See Remedy for 'Pump will not prime or loses prime' 3) See Remedy for 'Pressure drops/ fluctuates during standard operation'



Watch Instruction Videos:

www.youtube.com/enduraplas

Discover More Helpful Tips:

blog.enduraplas.com/spraying

WARRANTY

1. Poly Tank Limited Warranty - Subject to other terms in this Limited Warranty, Manufacturer warrants to the original end user that this Tank will be free from material defects caused during the manufacturing process for a period of 5 years from the Purchase Date provided such warranty to the original end user shall be extended to 10 years from the Purchase Date if the original end user registers the Tank with Manufacturer within 30 days of the Purchase Date. To register the Limited Warranty, registration must be completed in accordance with the requirements set forth at enduraplaswarranty.com

Other Products and Parts Limited Warranty - Subject to other terms in this Limited Warranty, Manufacturer warrants to the original end user that products and parts manufactured by Manufacturer (other than tanks) will be free from material defects caused during the manufacturing process for a period of 1 year from the Purchase Date unless otherwise expressly stated in writing by Manufacturer that an extended warranty applies.

2. Other Warranties Disclaimed and Excluded

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE LIMITED WARRANTY HEREIN STATED, AND MANUFACTURER EXPLICITLY DISCLAIMS AND EXCLUDES ANY AND ALL OTHER WARRANTIES INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, CUSTOM OR USAGE OF TRADE, AND COURSE OF DEALING. NO AGENT, EMPLOYEE OR REPRESENTATIVE OF MANUFACTURER HAS AUTHORITY TO BIND MANUFACTURER TO ANY REPRESENTATION OR WARRANTY EXCEPT AS STATED IN THIS LIMITED WARRANTY.

- 3. Limitation of Liability under the Limited Warranty In addition to those warranties disclaimed and excluded in clause 2 above, Manufacturer expressly further limits its warranty and liability under the Limited Warranty as set forth below in this clause 3.
 - 3.1. The liability of Manufacturer under this Limited Warranty is excluded to the extent that any defect has been caused or contributed to by:
 - any accident, contamination, tampering, willful damage, abuse, modification, improper storage, improper use (including but without limitation the storage of material) or negligent act of, or omission by, any person other than Manufacturer:
 - b) the improper installation of the Goods, or deterioration of the base on which any of the Goods rest or are mounted to:
 - any damage to the Goods caused by storm, wash away, landslide, mudslide, lightning, or any other natural phenomenon, vermin or other pests, and any undermining of the base of the Tank through any cause whatsoever;
 - d) the repositioning of the Goods from their original installation;
 - e) weathering or degradation of the Goods due to extreme climatic conditions;
 - f) improper installation of extra fittings;
 - g) any staining or discoloration, including from trees or ash fall-out from fires or other causes;
 - a Tank not being placed on a base that is free of any protruding objects of any kind;
 - a Tank being used for any purpose other than the storage of suitable liquids at the ambient temperatures.

- 3.2. Without limiting the generality of clause 3.1:
 - Manufacturer will not be liable for any personal injury, indirect or incidental damages, consequential losses, loss of liquids, loss of profit or any like claims whatsoever arising from any use of, or incidental to, or repairs to any of the Goods by a party other than Manufacturer;
 - to the extent that any component or material (including, but without limitation the polyethylene) used in the manufacture of any of the Goods is supplied and/or manufactured by a third party, the liability of Manufacturer is limited to Manufacturer's right of redress (if any) against the third-party supplier/manufacturer;
 - c) Tanks feature a vented lid at the time of manufacture.
 Any subsequent pressurization of the Tank by removing the vent, sealing the vent, or otherwise will cause this Limited Warranty as to such Tank to be null and void.
 - d) The liability of Manufacturer under this Limited Warranty is limited to, at Manufacturer's discretion:
 - e) providing a replacement Good (including shipping but excluding other replacement costs):
 - f) refunding an amount equal to a sum equal to the current Retail price divided by the months in the warranty, multiplied by the months remaining in the warranty period;
 - g) repairing the Good at no cost.
- 4. Proof of Purchase The original invoice or other similar proof of purchase of the applicable must be provided by Purchaser to Manufacturer when making a claim under this Limited Warranty. Warranty claims must be received in writing by Manufacturer within the Limited Warranty period.

- 5. Claims and Questions If you have questions about this Limited Warranty or to make a warranty claim, contact Manufacturer at: customercare@enduraplas.com
- 6. Definitions For this Limited Warranty the following definitions apply:
 - a) Manufacturer means Enduraplas LLC.
 - Purchase Date means the date upon which the applicable goods were purchased by the original end user.
 - c) Purchase Price means the actual price paid for the Tank by the original Purchaser.
 - Tank means the storage Tank manufactured by Manufacturer and purchased by the original end user Purchaser being the subject matter of the Limited Warranty.
 - e) Good(s) mean Tanks and/or other products or parts manufactured by Enduraplas LLC.
 - f) Limited Warranty means this written Limited Warranty.
- 7. State Law Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to certain parties. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to certain parties. This limited warranty gives specific legal rights and other rights, which vary from state to state, may also apply.
- 8. Governing Law This Limited Warranty will be governed by the laws of the State of Minnesota, without giving effect to any choice of law rule that would cause the application of the laws of any other jurisdiction

REGISTERING WARRANTY


Serial Number Location




How to Activate

To double your 5-year tank warranty, visit <u>enduraplaswarranty.com</u> and register this product.

OVERVIEW

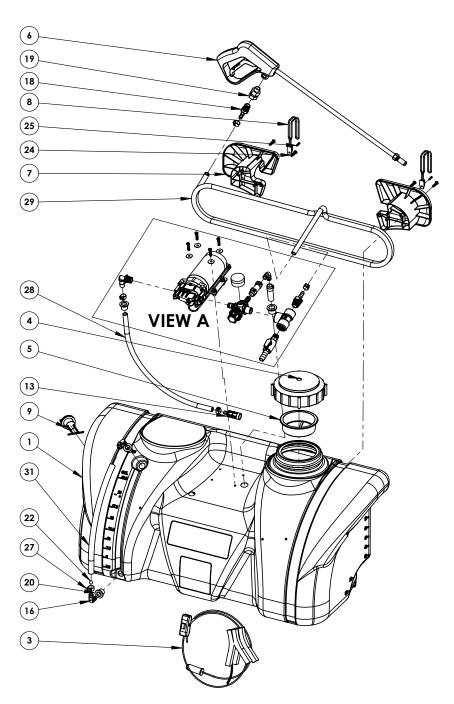

DETAIL VIEW A & PARTS LIST

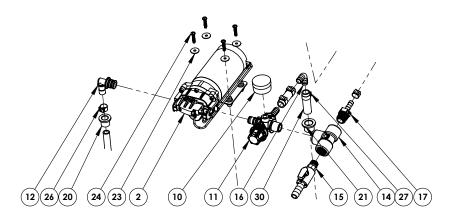

ITEM NO.	Part #	DESCRIPTION	QTY.
1	AMTHSC025FG	25Gal Spot Chief Tank	1
2	APD02G060P	2GPM 60PSI Pump	1
3	ASWC01	Wire Harness Kit	1
4	CVTL06	6" vented tank lid	1
5	CG83918303	6 IN Strainer Basket	1
6	CVSTAL26	spray gun 18 inch barrel	1
7	CPSC001	Hose Wrap for Spot Chief (Pair)	1
8	CPSC003	Bungy Loop 200mm nominal length	2
9	CPSC004	1-1/4"coarse thread drain bung	1
10	CVAM100	100 PSI Pressure Gauge	1
11	CA9620422	1 & 2 GPM Regulator	1
12	CPPDD004	7800 Series .375 Elbow 90	1
13	CA305010	In-Tank Suction Filter 3/8" Hose Barb	1
14	CBTEE050	1/2" Poly Pipe Tee	1
15	CVPBV38HB12	1/2 inch Male NPT x 3/8 inch Hose Barb Valve	1
16	CV3EL12HB	1/2 X 1/2 90 Degree hose barb	3
17	CFPS02M01B	.5 MPT X .375 Hose Barb	1
18	CFPS01M01B	3/8" MPT x 3/8" Hose Barb Straight	1
19	CVSW038	3/8 FPT X 3/8 MPT SWIVEL	1
20	CPFG10	5/8 Top hat grommet	3
21	CPFG09	3/4 Top Hat EPDM Grommet	1
22	CPSB01	10MM Site Glass Ball Level Indicator	1
23	CHWSK903	10 X .75 Fender Washer SS	4
24	CHMS900523	10-24 x 1 PHMSPH SS Screw	8
25	CHSS800843	#8 X 3/4 SS Phillip flat screw	2
26	CFCC002	CLAMP FOR 3/8 HOSE	4
27	CFCC003	Clamp for 1/2" Hose	5
28	CLUESB020001	3/8" EPDM Hose	1
29	CLUESB020001	3/8" EPDM Hose	25
30	CLUESB020002	1/2" EPDM Hose	2
31	CLUVGC02502	Site Gauge Hose	1

STAY CONNECTED

Want to be kept up-to-date on the latest news and information from Enduraplas? Enduraplas has several ways to get easy access to news alerts and instant updates on what's happening in the world of Enduraplas. Join the Enduraplas Community and connect with other Enduraplas fans, participate in giveaways, see videos of Enduraplas products in action, give us input on Enduraplas products, share your Enduraplas photos, and much more.













Enduraplas®

1 (877) 877-4370 cs@enduraplas.com www.enduraplas.com

113 1st Street, Neche ND 58265, USA

Order Genuine Enduraplas Parts & Accessories:

parts.enduraplas.com



Watch Instruction Videos:

www.youtube.com/enduraplas

Discover More Helpful Tips:

blog.enduraplas.com/spraying